

Floral Pillar Fountain

SG21087


Please read these assembly and care instructions carefully, and observe the safety directions. Keep these details in a safe place for future reference.

COMPONENT LIST

- 1 x fountain top with LED light set up
- 1 x fountain base
- 1 x pump and cable
- 1 x transformer

INSTALLATION INSTRUCTIONS

1. Choose a level surface to set up your fountain, and place the fountain base on the ground.
2. Connect the plastic hose to the inlet pipe on the pump. Connect the LED cable (Fig. A).
3. Sit the pump in the fountain base, and press down gently so the suction cups grip firmly.
4. Place the top section of the fountain over the base, so it sits straight and is stable (Fig. B).
5. Connect the pump plug to the transformer (Fig. B).
6. Fill the fountain base with clean water, and ensure the pump is fully submerged. The water level should be about 3cm below the rim (Fig. C).
7. Connect the plug to your power outlet.
8. Sit back, relax and enjoy!

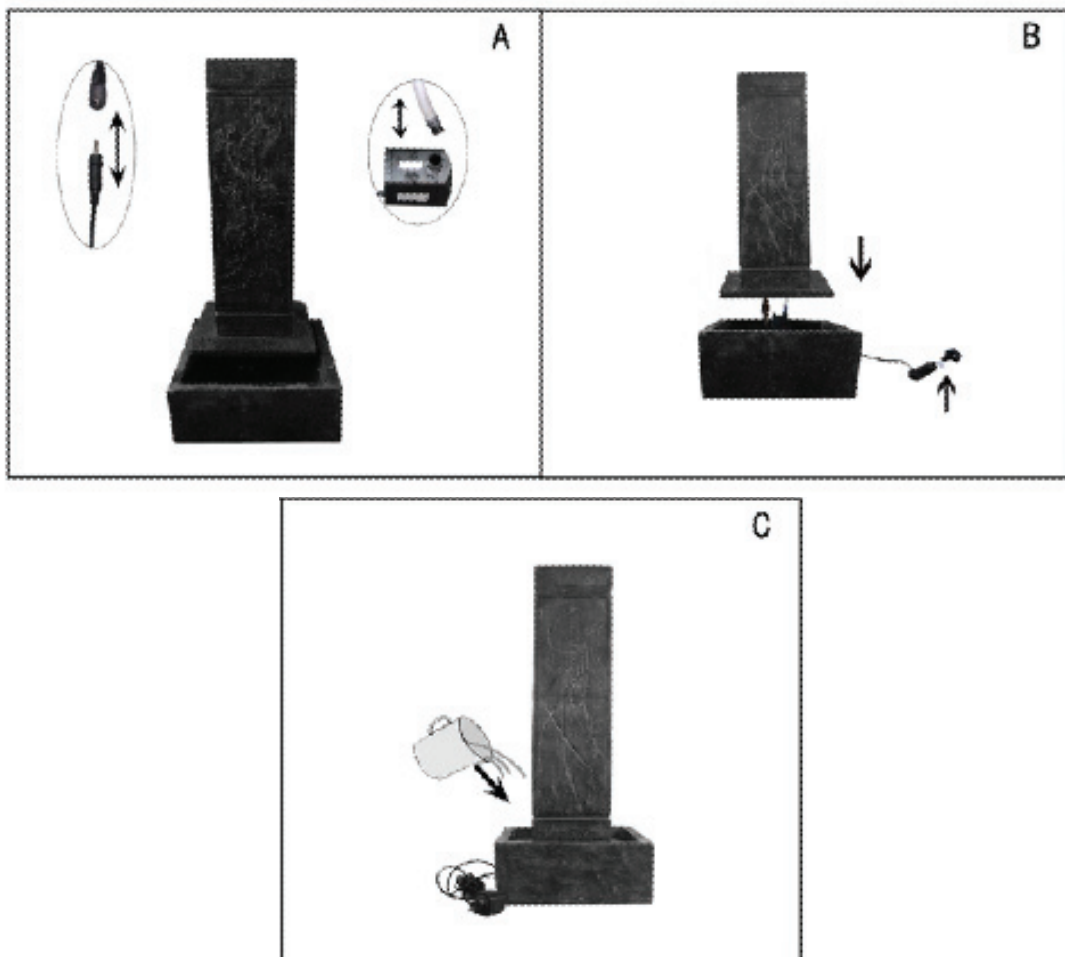

Please see over for important safety, care and troubleshooting information.

IMPORTANT CARE NOTICE

- » Always ensure the pump is fully submersed when in use.
- » Never allow the pump to run dry, as this will cause damage and invalidate the warranty.
- » Change and top-up the water on a regular basis. Always use cool fresh water.
- » If fountain is not in use for an extended period of time, unplug the pump, and drain the fountain completely.
- » Always disconnect from power before cleaning and maintaining the pump.
- » If in doubt about any electrical connections, please consult a qualified electrician.
- » Do not exceed the voltage shown on the pump. Keep cord away from heat sources.
- » Always supervise children around the water feature.

WINTER CARE

During winter, never allow ice to form in the fountain, as it may cause damage. Drain the fountain completely and store away from freezing temperatures and protect from frost.

CLEANING THE PUMP

To clean the pump, first disconnect it from the power supply and remove it from the water feature, then:

- a) Remove the inlet cover from the front of the pump, and gently grip the impeller to pull out the rotor assembly.
- b) Clean the rotor and rotor housing with water, then dry with paper towel.
- c) Reassemble the parts and store the pump in a dry area.

TROUBLESHOOTING

If water doesn't flow evenly over the fountain:

- a) Ensure the water feature is sitting on level ground to ensure even water flow.
- b) Adjust the pump's flow control switch.

If the pump fails to operate, check the following:

- a) Check that power is correctly connected, and that the pump is fully submerged.
- b) Check the pump and tubing for any obstructions or kinks.
- c) If the pump operates, and there are no kinks in the tubing, and the pump is fully submerged, but there is no flow, remove the tubing and clean the insides. Then place the pump back into the water and turn it on, and once the water begins to flow, re-attach the tubing.
- d) Remove the cover with the flow adjuster on it, and gently lever off the inner cover to reveal the pump impeller. Gently turn the rotor to check that it is not broken or jammed.

If the pump runs with slower water circulation, check the following:

- a) Adjust the flow control switch on the body of the pump.
- b) Ensure the pump is completely submersed.

If any abnormal sound is heard during pump operation, turn off the power supply and check the rotor assembly as follows:

- a) Remove the pump cover and rotor plate from the front.
- b) Grip the impeller and gently take out the rotor assembly.
- c) Rinse the rotor assembly and housing with clean water in order to remove any debris.
- d) If any breakage or surface damage is found on the rotor assembly, please contact your supplier.

We hope you continue to enjoy your water feature for many years.

Over time the finish may gradually mellow in colour, this is part of the natural weathering process.